

OPERATION NOTES

Thank you for your purchase of the Lingo Global Traveler. To insure trouble-free operation, we recommend the following:

1. The Global Traveler should be kept in area free from extreme temperature changes, moisture and dust.
2. This equipment is precision-built. Do not subject your translator to strong shock by striking or dropping it.
3. A soft, dry cloth should be used to clean your translator. Do not use solvents or a wet cloth.
4. Never disassemble or attempt to repair the translator and its accessories. Keep this manual for further reference.

FEATURES

1. The **Global Traveler** translates 20 languages containing 400,000 individual words and 40,000 phrases, 20,000 words and 2,000 phrases average per language.
2. The built-in **DATABANK** stores and retrieves names, telephone numbers and memos.
3. 12 digits **CALCULATOR** with memory and percent calculations.

4. **LOCAL TIME CLOCK** specifies your local date and time. **ALARM** sounds with your preset alarm time. Alternative American or English date format, 12-hour or 24-hour format and summer daylight saving time.
5. **WORLD TIME** shows the date and time in one of 200 major cities around the world.
6. **CURRENCY CONVERSION** functions as a currency converter for 8 denominations of your choices.
7. **METRIC CONVERSION** converts automatically 8 different types of measurement.
8. International **SIZES** for **CLOTHES/SHOES**.
9. **LIGHT/DARK DISPLAY** allows you a choice of 11 levels of contrast for the display.
10. **PERSONAL PASSWORD** allows you to lock your databank memory.
11. **86 x 32 DOTS MATRIX DISPLAY**.
12. **AUTOMATIC POWER OFF** conserves battery power by turning off the Global Traveler after 2 minutes.

BATTERY

The Global Traveler is powered by two AAA batteries as the main power supply, and one CR2032 lithium battery as the databank memory. When the power level of the batteries is low, the display will show <LOW BATTERY>. If this happens, replace the 2xAAA alkaline batteries immediately. The actual battery life depends on the batteries used.



We recommend:

- Always keep 2 pcs AAA batteries in the Global Traveler otherwise the backup battery for databank will be used.
- Replace the 2 pcs AAA batteries supplied with the unit not longer than 3 months after purchasing.
- Be sure that the positive and negative poles of each battery are facing in the proper direction.
- Never mix batteries of different types.
- Never mix old batteries and new ones.
- Never leave dead batteries in the battery compartment.

Replacing the AAA batteries:

Do not remove the isolation tape of backup battery from the Translator while AAA batteries are removed.

- a) Turn off the machine.
- b) Slide off the battery door according the direction of the arrow indicated. The battery door is attached to translator case.
- c) Remove the old batteries and replace 2 PCS AAA batteries (1.5 V, SUM-4, R3) in the correct polarity corresponding to the symbol indicated inside the battery compartment.
- d) Make sure that the batteries make good contact with the metal plates.
- e) Cover the battery door.

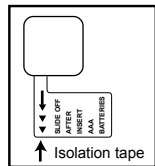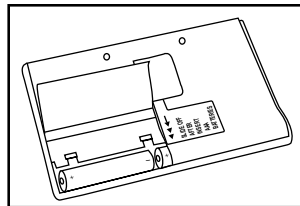


Replacing the databank memory backup battery:


Before replacing the memory backup battery, Do not remove the 2 pcs AAA batteries from the Global Traveler while memory backup battery is removed. Otherwise, the memory in your databank will be lost during the battery replacement. Be sure to replace the memory backup battery at least once a year.





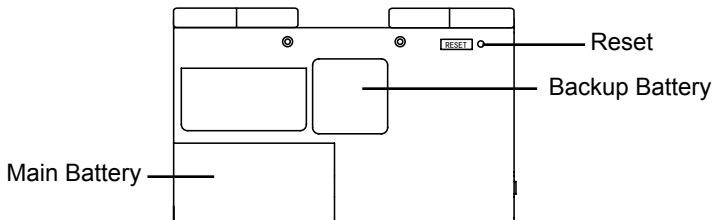




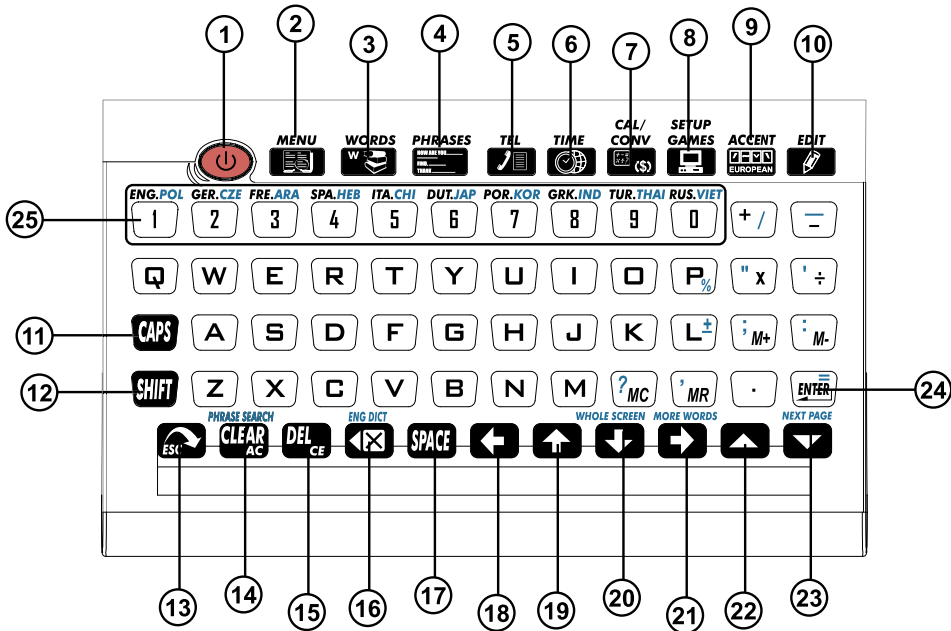



 1. Turn off the machine.
2. Unscrew the battery cover and replace the old battery with a new one. Wipe the surface of the battery with a soft, dry cloth. Make sure that the positive(+) side of the battery is facing up.
3. Replace the battery compartment cover and fasten it with the screw.



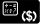








OVERVIEW THE TRANSLATOR




NAME OF KEYS










1. ON/OFF  : Turn on & off. The Global Traveler will automatically switch off if you do not press any keys 2 minutes .
2. MENU  : Main menu interface.
3. WORDS  : Enter single word.
4. PHRASES  : Enter category to access 2,000 phrases.
5. TEL/MEMO  : Personal data assistant.
6. DATE/TIME  : Press once to go to Local Time mode.
Press twice to go to World Time mode.
7. CAL/CONV  : Press once to go to Calculator mode.
Press twice to go to Conversion mode.
8. SETUP/GAME  : Press once to go to Setup Mode.
Press twice to go to Game Mode.
9. ACCENT  : When you are in European input, press this key to get the European. When you are in Chinese input, press this key to select the Chinese input method. There are two input methods in Chinese. When you are in Japanese input, press this key to select the Japanese Input method. There are two input methods in Japanese.
10. EDIT  : Press this key to amend data.
11. CAP  : Press once to get capital letter; press again to return to lower case letters.
12. SHIFT  : Shift to get other letter apart from main letter.
13. ESC  : Press this key to return to last screen.

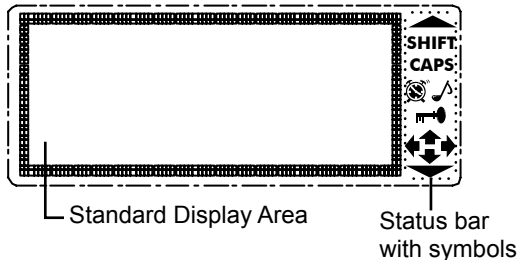14. CLEAR / AC : a) To clear the whole input in the translator mode.
 b) To erase data in databank mode.
 c) As the 'AC' key in Calculator mode.
 d) In phrases mode, press this key to clear the screen and input your word to search a right sentence.
- 
15. DEL / CE : a) Delete, to delete the letter with cursor.
 b) As the "CE" key in calculator mode.
- 
16. Backspace : a) To clear the last input.
 b) Press this key to access Dictionary.
- 
17. SPACE : Adds a space.
- 
18. Left key : To move the cursor left.
- 
19. Up key : To move the cursor up.
- 
20. Down key : To move the cursor down; or to see whole screen.
- 
21. Right : To move the cursor right; or to see more words from the database.
- 
22. Pg Up : Page Up key, to move the screen to the last page.
- 
23. Pg Dn : Page Down key, to move the screen to the next page.
- 
24. ENTER : a) Press this key to have translation in Translator mode.
 b) Press this key to store data into memory in databank mode.
 c) Press this key to confirm the setting in setup mode.
- 

25.  :
- a) Press these keys to enter the desired language.
 - b) Press these keys to get translation.
 - c) In Calculator mode, functions as numeric.

DISPLAY SYMBOLS



CAPS :	Indicate that it is in Capital Alphabet.
SHIFT :	Indicate that it is in Shift status.
	Indicate that it is in LOCK position and need a password.
	Indicate that it is to be setup with ALARM.
	Indicate that keyboard is with tone.
	Indicate that you can press the PAGE UP or PAGE DOWN key to scroll further for more data.
	Indicate that you can press Left or Right keys for more data.
	Indicate that you can press Up or Down keys for more data.

OPERATION



Before starting, please read this instruction manual carefully and be sure to follow the correct operating procedures. Keep this instruction manual for future reference.

TURN ON YOUR GLOBAL TRAVELER - To turn the Global Traveler on, press <ON/OFF>. The device always starts in the mode that was active when it was last turned off. For example, if you were in calculator mode during the last use, you will be in calculator mode again when you turn the Global Traveler back on.

The Global Traveler automatically turns off if no key is pressed for 2 minutes.

SET UP :


Press SETUP to adjust the basic settings of the Global Traveler. Various options are available in the setup menu. Press once to access settings. Press twice to access Game mode.

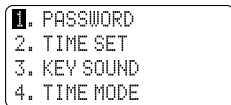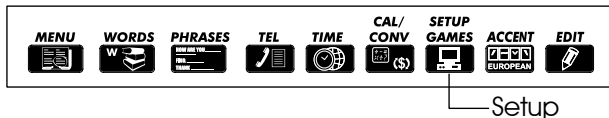


1. PASSWORD:

You can protect your TEL information by inputting your personal password. Before you input the password, make sure you can remember the password, otherwise, your data stored in TEL memory will be locked until you reset your Translator.


1.1 Move the cursor to the PASSWORD and press Enter, or just press <1> to setup your password. Display shows:

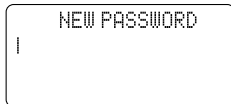


1.2 Enter your password (not more than 6 letters): (e.g. A1B2C3), display shows:

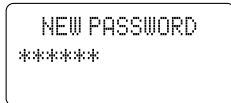


1.3 Press <Enter>, display CONFIRM interface, input password (A1B2C3) again:

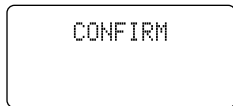A rectangular screen with a black border containing the word "CONFIRM" in a monospaced font, centered horizontally and vertically.


1.4 Press <Enter> to confirm, display flashed "LOCKED":

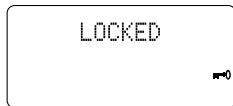A rectangular screen with a black border containing the word "LOCKED" in a monospaced font, centered horizontally and vertically. A small cursor icon is visible in the bottom right corner.

1.5 When you confirm the password, you have to input the password when you go into the database <TEL> and displays shows:

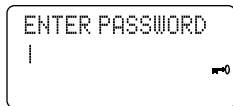
A rectangular screen with a black border containing the text "ENTER PASSWORD" in a monospaced font, centered horizontally and vertically. A vertical cursor bar is positioned on the left side, and a small cursor icon is in the bottom right corner.

1.6 When you enter a correct password, it will release you to the <TEL> mode. If you enter an incorrect password, it will flash "INCORRECT PASSWORD" and ask you to enter the Password again.

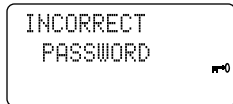A rectangular screen with a black border containing the text "INCORRECT PASSWORD" in a monospaced font, centered horizontally and vertically. A small cursor icon is visible in the bottom right corner.


1.7 Release your password, enter to Password in Setup mode.

1.8 Type your password, "A1B2C3", press <ENTER> display flashed "UNLOCKED", the password is released and display returns to previous menu.

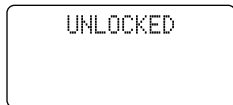A rectangular screen with a black border containing the word "UNLOCKED" in a monospaced font, centered horizontally and vertically.

1.9 If you forget your password, reset the Global Traveler. In this case, all your data in your TEL memory will be erased.

**NOTE : If you wish to clear all data, or find an abnormal screen which might be with interference by unexpected reasons, you can reset your machine.
When you perform the RESET operation, it will erase all data stored in TEL memory.**

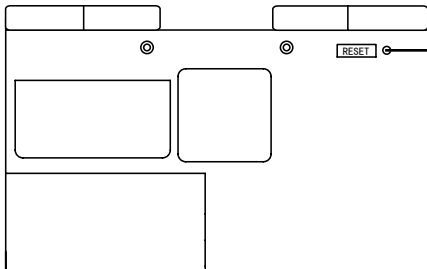

To reset the machine:
Use a thin pointed object
to press the reset hole.

2. TIME SET

2.1 Press <2> to set your LOCAL TIME. The screen displays the local time. There are 200 cities name stored in the translator. Select one city to be your local time.

```
=>NEW YORK<
      MON
      21-02-2005
      01:18:56
```

2.2. Use “Up” (↑) or “Down” (↓) key to search for local city. Or you can type in the first alphabet of the city name and then to search, e.g. press “N” to find the New York, display shows all the cities name which first alphabet is “N”. Press the “Down” (↓) key until New York appears.

```
=>NABLUS<
      MON
      21-02-2005
      01:20:56
```

2.3. Press “Right” (→) or “Left” (←) key to setup the date and time, e.g. change the date to 03-22-2005 and time at 12:30. Move the cursor by pressing the “Right” (→) key on the month, press the “Up” key until the 03 appears.

2.4. Press “Right” (→) key to move cursor to date, year or time, and change your required time using the same procedure as above.

```
=>NEW YORK<
      TUE
      22-03-2005
      12:30:30
```

2.5. Press “ENTER” to store the information entered, display returns to previous menu.

- 2.6 To see Time and World Time, press <Date/Time> key. Press once to see Local Time. Press twice to see World Time. Use “Up” or “Down” (↑↓) key to see World Time, e.g. Type “L” and press “Down” key until London appears.

```
1. PASSWORD
2. TIME SET
3. KEY SOUND
4. TIME MODE
```

```
LONDON
                TUE
                22-03-2005
☉☿ PM 05:36:46
```

3. KEY SOUND :

Select to have tone or without tone when you press any key.

- 3.1 Press <3> in setup mode, display shows:

```
▶ KEY SOUND ON
  KEY SOUND OFF ↵
```

- 3.2 Press “Up” or “Down” (↑↓) key to have tone On, you will find an “↵” icon of the key tone lights on. There is a tone when you press any key.

4. TIME MODE

- 4.1 Press <4> to setup your TIME MODE. i.e. 24-hours or 12-hours format. Display shows:

```
▶ 12HOUR
  24HOUR
```

- 4.2 Use “Up” or “Down” (↑↓) key to select 12HOUR or 24HOUR. Press ENTER to confirm this setting and return to SETUP menu.

5. DATE MODE

- 5.1 Press <5> to set your DATE MODE.
i.e. American format in Month/Date/Year,
or British format in Date/Month/Year, Display shows



▶ DD/MM
MM/DD

- 5.2 Use “Up” or “Down” (↑↓) key to select MM / DD (Month/Date) or DD/MM (Date/Month). Press ENTER to confirm this setting and return to SETUP menu.

6. ALARM SET:

 
- 6.1. Press <6> in the setup mode, displays shows:



ALARM OFF
00:00

- 6.2. Press “Up” or “Down” (↑↓) key to select Alarm on or off.
You will find an “🔔” icon of the Alarm on.

- 6.3. Press “left” (←) or “right” (→) key to select HOUR or MINUTE, Press “Up” or “Down” (↑↓) key to setup your time, e.g. 11:15.

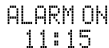


ALARM ON
11:15

- 6.4. When the alarm sounds, press any key to stop.

7. DAYLIGHT SAVINGS TIME:


If you are in Summer daylight saving time, select to switch ON the Summer time in your Global Traveler. When you switch ON the Summer time feature, the current time will automatically advance by one hour.

7.1. Press <7> in the setup mode, display shows:

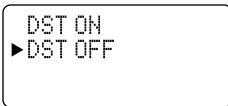

7.2. Press “Up” or “Down” (↑↓) key to select Summer Time ON or OFF.

7.3 After you setup Summer Time ON, you can see an icon “Z” on your local time.
This icon shows adding an hour for Summer time.

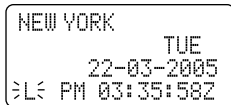

8. CONTRAST:

There are 11 levels light or dark display which you can adjust.

8.1 Press <8> in setup mode, the CONTRAST, display shows:




8.2 Press “LEFT” (←) key to decrease contrast, or press “RIGHT” (→) key to increase contrast.

8.3 Press ENTER until you find the optimal display contrast.

USING THE GLOBAL TRAVELER

The Global Traveler contains about 20,000 words plus 2,000 phrases per language. It translates 20 languages instantly.

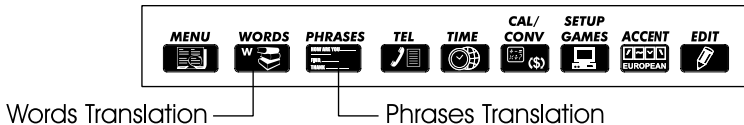

Words translation

1. Press <Words> key, display 'INPUT ENG:'
2. If you like to input another language, just press the number, e.g. press <3> to input French, press <3> again to input Arabic.

INPUT ENG:

INPUT FRE:

INPUT ARA:

3. Press <1> return to 'Input ENG', type in your word e.g. CAR, press "ENTER", display flashes 'Found: 20' and shows the translation of German 'auto'. It tells you there are 20 words related to 'CAR'

```
car  
CAR  
CAR PARK  
n CAR PARKS
```

```
CAR  
FOUND : 20  
ENG GER
```

```
CAR  
AUTO  
ENG GER
```

4. Press Right key (→) to see the other 19 words related to CAR.

```
CAR COAT  
WETTERMANTEL  
ENG GER
```

5. Press <6> to get Dutch translation, Press <6> again to get Japanese translation and so on.

```
CAR COAT  
AUTOMANTEL  
ENG DUT
```

```
CAR COAT  
カーユート  
ENG JAP
```

6. If the message is too long, press “Down” (↓) key to see the whole screen.
7. Press Page Down (▼) key to see next word.
8. To enter a new word, just type.
9. If you like to input another language, press <Words> key and select to input another language again.
10. There is a smart system of inflective form to input the European languages. E.g. in English, when you enter “gone”, it can find the RootWord ‘go’ and displays :

```
gone
█ GONE
GONDORRHOEA
█ GONORRHOI
```

```
GONE
  INFLECT
  FOUND: 30
█ ENG      █ JAP
```

```
GO
  行<
█ ENG      █ JAP
```

Type in ‘more beautiful’, can display word ‘beautiful’; type in ‘Boys’, can display word ‘boy’.

11. WORD FINDING - If the word(s) you entered is not in the database, the display will show the nearest word(s) instantly. E.g. when you type in “boa”, it can find the nearest word ‘boar’.

```
boa
BOAR
BOARD
BOARDING
```

```
NEAR...
```

```
BOAR
  FOUND: 1
█ ENG      █ JAP
```

12. English to English Dictionary

There is an English Dictionary to help understand the definition of the main word and its Parts of Speech.

- a. Type in a word(s) to translate, e.g. <SHINE>, press <ENTER> key, display flashed 'Found : 1', telling you there is 1 word relating to <SHINE>, and shows the <German> translation.

```
SHINE  
STRAHLEN
```

```
ENG GER
```


- b. Press <ENG DICT> , display shows :
<v. to glow or be bright with reflected light>.

```
SHINE  
[v.] to glow  
or be bright
```


```
ENG ENG
```


- c. To enter a new word, just type.
d. The English Dictionary is only available to a main word, it is not available to the related words.


13 . FOR THE EUROPEAN LANGUAGES HAVE THEIR ALPHABET WITH ACCENT:


Simply press the original key and then European Accent key () , the display will show different alphabets and let you select. E.g. in the entry language of French, Type in A, display show:



Press European () once, display shows:

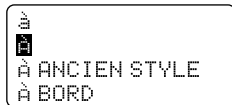

Press European () twice, display shows:

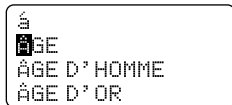

NOTE : The Accent Alphabet can be used only in the European language mode.If you press the “ACCENT” when it is not in a European Language, the display has no response.

Phrases translation:

There are 2000 phrases divided into 16 categories and 147 chapters.

1. COMMUNICATION - Phrases, Thanks, Apology, Asking Again, Basic Question, Saying Hello, Saying Goodbye, Conversation, Invitation, Expressing Sympathy, Emotion, Quarrel, Congratulations, Phrases of Love.
2. ACCOMMODATION - Looking for a Hotel, Reservation, Checking in, Front Desk, Room Service, Laundry, Operator, Problem, Business Centre, Checking Out.
3. MEALS - Looking for a Restaurant, Reservation, Order, Waiter's Service, Payment, Chinese Food - Beijing Cuisine, Chinese Food - Shanghai Cuisine, Chinese Food - Szachung Cuisine, Chinese Food - Cantonese Cuisine, Japanese Food, Thai Food, Vietnamese Food, Korean Food, Indian Food, French Food, Italian Food, Mexican Food, Western Food.
4. SIGHTSEEING - Leaving a Country, In the plane, Entering a Country, Tourist Information, Sightseeing/Tours, Exchanging Money, Photography.
5. TRANSPORTATION - Airplane, Ship, Train, Under-ground Railway, Taxi, Bus, Car, Map.
6. ENTERTAINMENT - Recreation, Bar, Night Club, Karaoke, Disco, Sauna Bath, Casino,
7. SHOPPING - Looking for a Store, Purchasing, Bargaining, Paying, Clothes/Tailor.
8. EMERGENCY - Asking for Help, Lost/Theft, Sudden Illness/Injury, Symptoms/Diseases, Hospital, Pharmacy.
9. TELECOM/MAIL - Mailing, Telephone, Telegram/Fax/Page.
10. BUSINESS CONVERSATION - Meeting, Payment Terms, Letter of Credit (L/C),

- Shipment Documents, General Term of Trade, Interview.
11. BASIC - Numbers, Time, Date/Week/Months, Colors, Figure, Position, Unit.
 12. GENERAL KNOWLEDGE - Weather/Geography, Country, City, Vacation Places, Animal, plant, Insect.
 13. LIVING - Housing, Electrical Appliances, Furniture, Sleeping Set, Clothing, Shoes/ Hosiery/Headgears, Size/Materials, Toiletry, Cosmetic, Skin Care, Jewelry & Accessories, Souvenirs, Office Appliance, Tele-communication Products, Tools.
 14. FOOD - Beverages, Meat, Vegetable, Sea Food, Daily Food, Bar Snack, Fruit, Meals, taste, Cooking, Condiments, Chinese Dessert, Western Dessert, Chinese Snack, Western Snack, Alcoholic Beverage, Dinner Set.
 15. HUMAN BEING - Family, Education, Occupation, Marriage, Race, Religious, Society, Festival, Zodiac, Music/Musical Instruments, Chinese Year/ Birth of 12 Animals.
 16. SPORT - Ball Games, Water Sport, General Sport, Terms of Games, Swimming, Golf.
1. Press 'Phrases' key, displays category :

```
>COMMUNICATION  
ACCOMMODATION  
MEALS  
SIGHTSEEING
```

2. Press “Page Up/Down key” (↑↓) to search your category, or simply type in the first alphabet of the category, e.g. ‘B’, it goes to ‘BUSINESS CONVERSATION’.
3. ENTER to ‘BUSINESS CONVERSATION’, you will find there are 6 chapters
4. Use “Up/Down” key (↑↓) to go to the chapter. e.g. SHIPMENT DOCUMENTS, Press ENTER.
5. The first phrase will appear ‘AIR WAYBILL’ and its translation; press “Page Down “ (▼) key to see the next phrase ‘BILL OF LADING’.

```
TELECOM/MAIL  
>BUSINESS CONV  
BASIC  
GENERAL KNOWL
```

```
>MEETING  
PAYMENT TERMS  
LETTER OF CRE  
SHIPMENT DOCU
```

```
AIR WAYBILL  
LUFTFRACHTBRIE  
-F  
ENG GER
```

```
BILL OF LADING  
FRACHTBRIEF  
ENG GER
```

QUICK SEARCH PHRASES

1. Press Phrases key, display category
'COMMUNICATION' 'ACCOMMODATION'.....

```
>COMMUNICATION  
ACCOMMODATION  
MEALS  
SIGHTSEEING
```

2. Press PHRASE SEARCH (CLEAR) key to clear screen, type in the word,
e.g. 'sympathy', press "ENTER", displays shows searching symbol,
and goes to a subject 'sympathy'.

```
INPUT ENG:
```

```
Searching...
```


```
INVITATION  
>EXPRESSING SY  
EMOTION  
QUARREL
```

3. Press ENTER to browse phrases in this chapter. Press ACCENT to search more chapters.

USING THE CALCULATOR

You can use the Global Traveler r to do standard arithmetic, memory and percent calculations to 12 digits.

1. Press once of "CAL/CONV" key into the calculator mode, display shows:
2. Standard calculation, +, -, x, ÷.
3. Memory calculation:
 - (M+) to total a calculation and add the total to memory.
 - (M-) to total a calculation and subtract the total from the value in memory.
 - (MR) to recall or display the value in memory.
 - (MC) to clear the memory.
4. Press "CE" or "AC" to clear display and calculation.

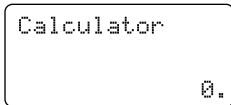

USING THE TEL/MEMO

The Global Traveler databank allows input in all 20 languages. If you need to input the other languages, please select the language to be the entry language in Words or Phrases mode. E.g. If you need to input a Japanese name, you need to go to Words or Phrases mode and change the language to Japanese.

1. INPUT YOUR DATA

1.1 Press function key of "TEL/MEMO", displays shows:

```
1. NEW ITEM
2. VIEW ITEM
3. DELETE ALL
```

1.2 Press 1 to enter NEW ITEM, display flashes: "Enter name:". E.g. enter name "bill gote"

```
ENTER NAME:
```

```
bill gote|
```

1.3 Press ENTER, display flash: "Enter Tel:"

```
ENTER TEL :
```

1.4 Type in E-MAIL / PAGE / FAX and ADDRESS, according sequence.

1.5 Press ENTER to store the information.

2. RETRIEVE YOUR DATA

2.1 Press “TEL/MEMO” to enter the “TEL/MEMO” mode.
Display shows:

```
1. NEW ITEM
2. VIEW ITEM
3. DELETE ALL
```

2.2 Press 2 enter to VIEW ITEM . Press“page Down” (▼) key to scroll data according to the alphabetical order of the names stored.

2.3 For quick search:

Enter to VIEW ITEM mode then Enter, type in the first letter of the name or full name which you want to retrieve. Press enter again.

3. EDIT YOUR DATA

3.1 Press “TEL/MEMO”, display shows:

```
1. NEW ITEM
2. VIEW ITEM
3. DELETE ALL
```

3.2 Press 2 to enter VIEW ITEM.

Press“page Down” (▼) key to browse data, e.g:

```
bill gote
22 346 8890
bill@aze.com
```

3.3 Press “EDIT”, the display shows the name and a cursor on the first letter flashing,

```
>bill gote
```

3.4 Move the cursor by using the “RIGHT” or “LEFT” (←→ key, type in a new letter, e.g. move the cursor to “O” and type in ‘A’, press ‘DEL’ to delete the ‘O’. Then, press “ENTER” to edit TEL. Display shows:

```
bill gate
```

3.5 Edited the E-MAIL, PAGE FAX and ADDRESS, according to sequence. Press Enter, Display shows:

```
SAVING...  
(Y/N)?
```

3.6 Press ‘Y’ to confirm the enter or press ‘N’ for NO. Display returns to show the full page.

4. DELETE THE DATA

4.1 Press “TEL/MEMO”, display show:

```
1. NEW ITEM  
2. VIEW ITEM  
3. DELETE ALL
```

4.2 Press 2 to Enter to VIEW ITEM.

Press “page Down” (▼) key to search the required name, e.g. “bill gote”


4.3 Press “DEL” (Delete) and display shows:



DELETE
(Y/N)?

4.4 Answer by pressing either Y for YES or N for NO, after which the Global Traveler will return to the previous mode.

4.5 To delete all the data inside the databank:
In Tel/MEMO mode, Press 3 <Delete all>, display shows:

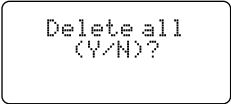

Delete all
(Y/N)?

4.6 Press Y for Yes to delete all data inside, or press N for No. e.g. ‘Y’, display returns to the TEL mode.

4.7 At this stage, when you press 2 <VIEW ITEM> or 3 <DELETE ALL> display flashes to confirm the memory is empty.



MEMORY EMPTY

USING THE METRIC CONVERTOR

The Global Traveler can convert one type of measurement to another. The following 8 related pairs are built-in the unit and they can be inverse : °C(Celsius) to °F (Fahrenheit) ,M (Metre) to F (Feet), CM (Centimetre) to IN (Inch), L(Litre) to GL(US Gallon), L(Litre) to BG (British Gallon), KB (Kilogram) to LB (Pound),G (Gram) to OZ (Ounce) and A (Are) to AC (Acre).

1. Press CAL/CONV key to go to Conversion mode.
Press once of this function key is the 'CALCULATOR' mode, press twice is the CONV (Conversion) mode.
Displays shows:

```
1. METRIC
2. CURRENCY
3. SIZES
```

2. Press 1 or Enter to go the Metric conversion mode.
Display shows °C - °F and the formula for Celsius to Fahrenheit.

```
°C -> °F
F=1.8*C+32
    0.
    32.
```

3. Enter the amount, e.g. 25 °C, press 25, display shows, from Celsius to Fahrenheit, i.e. 25 °C = 77°F .


```
°C -> °F
F=1.8*C+32
    25.
    77.
```

4. To convert from Fahrenheit to Celsius, press "Left" (←) key, display shows:

```
°C -> °F    I
F=1.8*C+32
    0.
-17.7777777778.
```

5. Enter the amount, e.g. 100 °F , type 100,
display shows: (100 °F = 37.7777777778 °C)

```
°C -> °F   I
F=1.8*C+32
          100.
37.7777777778.
```

6. Press “Page Down” key (▼) to see other conversions, and “Page Up” key (▲) to r
return.
7. Other types of measurement conversions work the same as above.
8. Press ESC () to return to select conversion screen.

USING THE CURRENCY CONVERTOR


The Global Traveler can convert between 8 user-programmed currencies and your own denomination.


1. SETTING THE CURRENCY AND EXCHANGE RATES

- 1.1 Press CAL/CONV key twice to go to Conversion mode,
then press 2 to go to CURRENCY
conversion, display shows:

```
USD->EUR
          1.
          0.
          0.
```

1 = CURRENCY ONE
USD = US Dollars
EUR = EURO Dollars

- 1.2 Press “EDIT” (),
the currency name flashes:

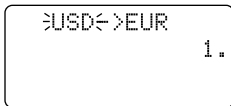

- 1.3 Change the currency name by typing in a new name,
e.g. change USD to CHF.
- 1.4 Press “ENTER” to confirm the currency name.
- 1.5 To change the exchange rate. e.g. US Dollar one approximately equals to 0.992
EUR. Press EDIT key to make the currency USD flashing, and then press RIGHT
key (→) to move the flashing to the exchange rate.
- 1.6 Press “Enter” to confirm the rate.
- 1.7 The Global Traveler programs the following 8 currencies, you can change your own
denomination according to the above procedure. Use PG UP & PG DW (▲▼) key
to view other currencies.

- 1 = USD > EUR (Euro)
- 2 = USD > GBP (Great British Pound)
- 3 = USD > RMB (Chinese Ren Min Bi)
- 4 = USD > JPY (Japanese Yen)
- 5 = USD > KRW (Korean Won)
- 6 = USD > TAB (Thai Baht)
- 7 = USD > CAD (Canadian Dollar)
- 8 = USD > AUD (Australian Dollar)

2. CONVERTING CURRENCY

2.1 Press "CAL/CONV" to Conversion mode. and then 2 to select "CURRENCY", display shows the first currency US Dollar to EURO.

2.2 Type in the amount, e.g. USD 1,000 display shows:

```
USD->EUR
      0.992
     1000.
      992.
```

2.3 To make 2 currencies inverse, press Left or Right (←→) key.
E.g. To find EUR to what amount of US Dollars.
Press Left (←) key, the arrow point to USD.

```
USD<-EUR  I
      0.992
       0.
       0.
```

2.4 Type in 1000,
display shows: (EUR1000=USD 1008.06451613)

```
USD<-EUR  I
      0.992
     1000.
  1008.06451613
```

2.5 To clear display for next calculation, press CE or AC.

USING THE SIZE CONVERTOR

Use the Global Traveler to convert the following garment and shoe sizes.

Women Clothes

Men Shirts

Women Shoes

Men Shoes

1. Press <CAL/CONV> key to Conversion mode, then press <DOWN> key or <3> to select SIZES, display shows:
2. Use Up or Down (↑↓) keys to select the desired subcategory. e.g. <Woman shoes>.
3. Press <ENTER>, display shows:
4. Use Left & Right (←→) key to move to see other size conversion.

```
► Women Clothes
  Men Shirts
  Women Shoes
  Men Shoes
```

```
America 5½ 6
Britian 4½ 5
Italy 37 37½
Japan 23 23½
```

```
America 6½ 7
Britian 5½ 6
Italy 38 38½
Japan 24 24½
```

USING DATE/TIME/WORLD TIME:



DATE/TIME/WORLD TIME


1. Press 'DATE/TIME' once to have Local Time display, the icon " L " on left bottom corner means local time.
2. Press 'DATE/TIME' 2x to have World Time display, the icon " W " on left bottom corner means World time.
 - a. Press "DATE/TIME" 2x to enter to World Time mode (200 cities name are displayed). Display shows the city name which you edit at last time. e.g. LONDON
 - b. Search your required city by pressing the "UP" and "Down" (↑↓) key or type the first alphabet of the city name to get the city. E.g. Type the "H" to search Hamburg, display shows:

```
NEW YORK
                TUE
                22-03-2005
L  PM 06:57:56
```

```
NEW YORK
                TUE
                22-03-2005
W  PM 10:59:56
```

```
HAIFA
                WED
                23-03-2005
W  AM 01:00:56
```

e.g. Press Down (↓) key to next Hamburg, display shows:

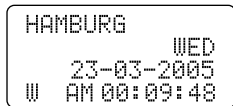

HAMBURG
WED
23-03-2005
W AM 00:09:48

c. Press 'DATE/TIME' to return to Local Time screen.

GAME

4 Games of intelligence: Decoder, 24, Number Slide, Hangman.

Press the Setup/Game key 2x to enter game mode, display shows:

```
1.DECODER  
2.24  
3.NUMBER SLIDE  
4.HANGMAN
```

1. Decoder

Guess the correct 4 number sequence you have only eight tries.

1.1 In game mode, press 1 to enter game <DECODER>, display shows:

```
Input: _ _ _ _
```

1.2 Input four different number, e.g. 1234, display shows:

```
Input: 1 2 3 4
```

1.3 Press ENTER, display shows:


```
Input:  
1.1234 1A0B -
```

- 1.4 The result shows 2A1B, 2A means there are 2 numbers in the correct position; 1B means there is 1 correct number but the position is incorrect.
A: Correct number and position
B: Correct number but the position is incorrect
- 1.5 If you guess the correct number within eight attempts, the display shows “You win!”, Otherwise, the display shows “Sorry Fail!”, then you can press <ESC> key to exit the game or press any key to continue the next game.

2. 24

Use the 4 number clue to calculate arithmetic formulas needed to total “24”.

- 2.1 In game mode, press 2 to enter game <24>, display shows:
- 2.2 Press any key to get answer.
- 2.3 Press <ESC> key to exit the game.

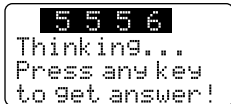

3. Number Slide

Slide the numbers into “123” for the first row, “456” for the second row, “789” for the third row.

3.1 In game mode, press 3 to enter game <NUMBER SLIDE>, display shows:



3.2 Press UP DOWN LEFT RIGHT(↑↓←→)keys can change four figure of square frame.

3.3 Press ENTER key, four figure of square frame is highlighted. Press the SPACE key, four figures in the square frame will rotate and move in counterclockwise direction.


3.4 The counter begins at 0, once you press the ENTER key or the SPACE key, its value adds 1 automatically up to 999 moves before returning to 0.

3.5 Press ESC key to exit the game.

4. Hangman

The goal of the game is to find the correct word for the given definition.

In the first line, you see several dashes that represent placeholders for the letters of the answer word. To the right of this is a number that indicates the remaining number of incorrect guesses allowed. In the line below this, the definition for the answer word is displayed.

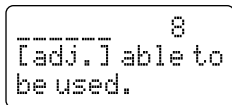

Press the keys for the letters that you think are found in the word.

If the letter is found in the answer word, the placeholder is replaced with that letter. If you guess incorrectly, the number of incorrect guesses allowed is decreased. After eight incorrect guesses, the correct answer appears.

***WE SINCERELY HOPE YOU ENJOY THE USE OF YOUR
LINGO GLOBAL TRAVELER TRANSLATOR***