

Lingo[®] *TravelMate*

***16 Language Translator
Instruction Manual***

***Over 320,000 words
and 32,000 useful phrases
Databank and Calculator
Metric Conversions
Currency Conversions
Local Time
World Time***

OPERATIONAL NOTES

Thank you for your purchase of our Lingo Translator. To insure trouble free operation of your Translator, we recommend the following:


1. The Translator should be kept in area free from extreme temperature changes, moisture and dust.
2. This equipment is precision-built. Do not subject the translator to strong shock by striking or dropping it
3. A soft, dry cloth should be used to clean the translator. Do not use solvents or a wet cloth.
4. Never disassemble or attempt to repair the translator and its accessories. Keep this manual for further reference.

FEATURES

1. The TRANSLATOR translate 16 languages containing total 320,000 words and 32,000 sentences, average each language contains 20,000 words and 2,000 sentences.
2. The built-in DATABANK stores and retrieves names, telephone numbers and memos.
3. 12 digits CALCULATOR can do memory and percent calculations as well as standard arithmetic operations.

4. LOCAL TIME CLOCK specifies your local date and time. Alternative American or English date format, 12-hour or 24-hour format and Summer daylight saving time.
5. WORLD TIME shows the date and time of any one of 200 major cities in the world.
6. CURRENCY CONVERSION plus 8 METRIC CONVERSION.
7. LIGHT/DARK DISPLAY allows you a choice of 17 levels either light display or dark display.
8. PERSONAL PASSWORD allows you to lock your databank memory.
9. Read by 2 LINES x 16 CHARACTERS DOT MATRIX DISPLAY.
10. AUTOMATIC POWER OFF conserves battery power by turning off the translator after 2 minutes.

NAME OF KEYS

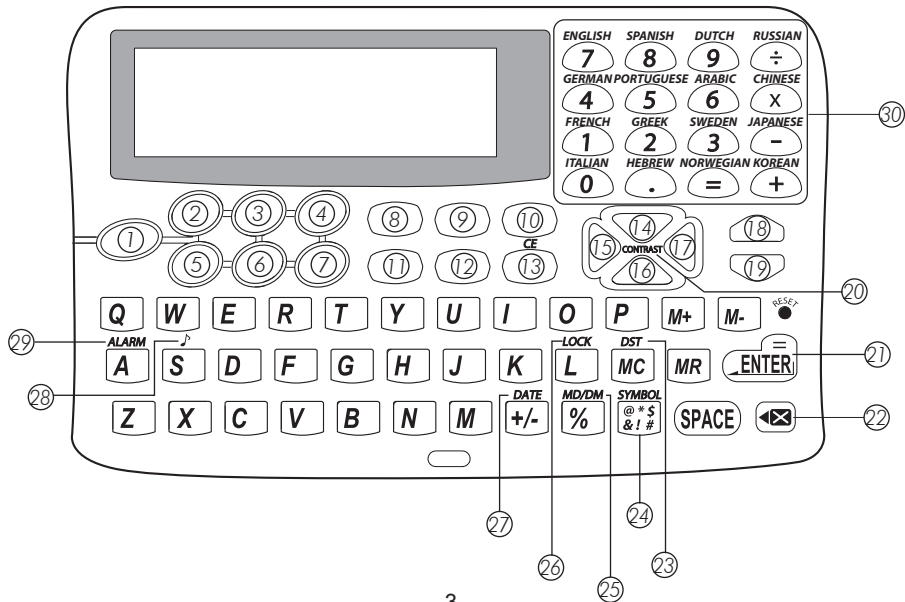


1. ON/OFF : Switch on & off. The translator will automatically switch off if you do not press any keys for approximately 2 minutes.
2. WORDS : Enter Single Word.
3. PHRASE : Enter category to get 2000 sentences.
4. TEL : Press this key to enter to Databank mode.
5. TIME :
 - a) Press once to enter the Local Time mode.
 - b) Press twice to enter the World Time mode.
6. CAL : Press this key to enter into the calculator mode.
7. CONV : Press to enter to Currency, Metric and Size mode.
8. ACNT : Press this key to get accent on European, or press Symbol ACNT to get symbols.
9. 12/24 : In Local Time mode, press this key to change your display format to 12 or 24 hours.
10. AC : To Clear the whole input in Calculator mode.
11. EDIT : Press this key to change data or information already input.
12. ESC : Press this key to return to last screen.
13. CLEAR :
 - a) To clear the whole input in Translator mode.
 - b) As the "CE" key in Calculator mode.
14. UP : To move the cursor upward.
15. LEFT : To move the cursor leftward.
16. DOWN : To move the cursor downward.
17. RIGHT : To move the cursor rightward.

- 18. Page Up : To scroll the last page.
- 19. Page Down : To scroll the next page.
- 20. CONTRAST : In Local Time mode, press this key to darken or lighten the display.
- 21. ENTER :
 - a) To have translation in translator mode.
 - b) To store data into memory in databank mode.
 - c) To confirm the time setting in local time and world time mode.
- 22. Back Space : Back and delete the last input.
- 23. DST : Day Summer Time. In local time mode, press this key to increase or decrease one hour for Summer time.
- 24. SYMBOL : To get symbol in Translator and Databank mode, press ACNT to get the symbols.
- 25. MD/DM : In local time mode, press this key to change your display to see American or European date format.
- 26. LOCK : In Local Time mode, press this key to setup or delete your personal password.
- 27. DATE : In local time or world time mode, press this key to see the date.
- 28. TONE : In local time mode, press S key to switch ON or OFF tone for keyboard.
- 29. ALARM : In local time mode, press A key to switch ON or OFF for ALARM function.
- 30. 16 LANGUAGE KEYS :
 - a) Press these keys to enter the desired language.
 - b) Press these keys to get translation.
 - c) In calculator mode are functions numeric.

BATTERY FITTING

1. Your translator is powered by main two CR2032 lithium batteries and databank memory power by one CR2032 lithium battery. When the power level of the batteries is low, display low battery. If it happens, replace the main one battery for translator immediately.
 - a) *Turn off the machine.*
 - b) *Slide the switch to right hand side to open, then pull off the battery door of main compartment.*
 - c) *Remove the old batteries and replace them with new ones, ensure that the positive (+) poles are on top, same as the symbol indicated inside the battery compartment.*
 - d) *Make sure that the batteries make a good contact with the metal plates in the battery compartment.*
 - e) *Pull the battery compartment inside the cabinet.*
2. The battery for databank memory is not required to replace unless your main battery was always in very low power. In case, replace the main 2 batteries first and keep them in the battery compartment, then to replace the battery of databank. With this way the memory in your databank will not be lost during the battery replacement. To replace the memory battery, unscrew the battery cover and replace new one.

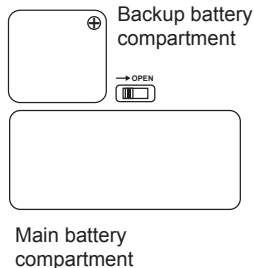

OPERATION

Before starting, please read this instruction manual carefully and be sure follow the correct operating procedures. Keep this instruction manual for future reference.

A. SWITCH ON YOUR TRANSLATOR -

Pulling out the battery isolating tape from the battery compartment, remember to pulling out the tape for main battery first, after that, pulling out the type for back up battery, your translator will start to Power ON. Display shows the LOCAL TIME.

B. LOCAL TIME

1. Display shows:
'L' is flashing, means LOCAL.
2. Press 'DATE', screen displays the date, day and time.
3. Press 'MD/DM', screen changes to American format.
4. Press 'MD/DM' again, screen changes back to British format.

NEW YORK ≡L≡ AM 12:00:00

01-01-2004 THU ≡L≡ AM 12:05:10

01-01-2004 THU ≡L≡ AM 12:05:10

01-01-2004 THU ≡L≡ AM 12:05:10

5. Press '12/24', screen changes to 24-hour format.
6. Press '12/24' again to change back to 12-hour format.
7. Press 'DST' in case you are in Summer daylight saving time. Screen displays 'Z' next to the current time. The current time will automatically advance by one hour. Press 'DST' again, the screen returns to original time.
8. Press 'DATE', the screen returns to the home place and time.
9. Press 'EDIT', to enter into set up mode. The place name is flashing. Press up or down keys to search the place you like to take. Or you can type in the first alphabet of the place name and then to Search, e.g. press (L) for find the London, display shows LA PAZ. Press the down key until London appears.

```
01-01-2004 THU
≡L≡      00:05:10
```

```
01-01-2004 THU
≡L≡ AM   12:05:10
```

```
01-01-2004 THU
≡L≡ AM   01:08:10Z
```

```
01-01-2004 THU
≡L≡      00:07:10
```

```
NEW YORK
≡L≡ AM   12:11:00
```

```
≡NEW YORK≡
L AM    12:11:00
```

```
≡LONDON≡
L AM    12:11:00
```

10. Press Right or Left keys to set up the data and time you require. E.g. change the time to 5:30:00 appears and then press the right key to next step, the hours is flashing, press the down key until 05:00:00, then press right key to edit minutes. Press the Right key again and go to change the date. Same as above procedures to change your required time. Press ENTER to store the information already entered.

LONDON
L AM 12:11:00

LONDON
≡L≡ AM 05:30:00

LONDON
≡L≡ AM 05:33:20

C. **SETTING THE DAILY ALARM**

An alarm sounds daily whenever a preset alarm time is reached. The daily alarm can only be set when it is in local time mode.

1. Press <TIME> to enter into local time mode.
2. Press <ALARM> to enter into alarm mode, display shows:
3. To set an alarm:
 - a) OFF is flashing, press the <UP> and <DOWN> key to select ON/OFF, e.g. press <DOWN> key to turn on the alarm, display shows:

NEW YORK
≡L≡ AM 05:33:20

ALARM≡OFF≡
00:00

ALARM≡ON≡
00:00

b) Press <LEFT> or <RIGHT> key set up the time you require. E.g. set the time to 14:30. Press <DOWN> key until 14:00 appears. Press the <RIGHT> key to the next step, the minutes is flashing, press the <DOWN> key until 30 appears. Press <ENTER> to confirm the time.

ALARM ON
14:00

ALARM ON
14:30

4. Once the time reach 14:30, the translator will alarms.
5. Press any keys to stop the alarm. Otherwise the alarm will last for 30 seconds and stop automatically.
6. To clear the daily alarm, go back to Alarm mode to select Alarm off.

D . LCD CONTRAST ADJUSTMENT

1. The LCD Contrast can only be adjusted when you are in home time mode.
2. Press up to make the screen darker or Down to make the screen lighter.
3. There are 17 contrast levels. Press the Up and down key once by once can get each level. I.e. Press 8 times up can get the darkest screen, and press 8 times Down can get the lightest screen.

E. USING THE WORLD TIME

1. Press time/world to enter to world time mode (200 cities names are displayed with English only). Display shows the place name which you edit at last time, and the flashing 'W' means world.
2. Search your required city by pressing the Up and down key or type the first alphabet of the city name to get in the place. Press Date to see the date of the required city, and DATE again to see the city name.

LONDON ≡W≡ AM 10:37:20

F. USING THE TRANSLATOR

a. LANGUAGE SELECTION - You can select any 16 languages for your home language.

1. Press <WORDS> key, display shows : INPUT ENG.
If you like to choose other language to your home language, just press any one of the 16 languages numbers key to select your home language.
2. Type in any word(s) you wish to translate, e.g. <BOOK>, press <ENTER> key, display flash 'Found : 14', telling you there are 14 words relating to <BOOK>, and shows the Spanish translation.

INPUT ENG:

BOOK

BOOK FOUND : 14

BOOK LIBRO

3. Press <DOWN> <▼> key to search the other words relating to <BOOK>, display shows:
4. You could continue to press down key to search all the word list of <BOOK>, and display icon will show only the up arrow once it arrives the bottom.
5. If you want to find out the translations of the other 14 languages of the same word, press the language keys then you can get immediate translation for the other 14 languages.
The example is showing from the last mode ENG to SPA mode, display shows:

BOOK CABINET
ARMARIO PARA LIB

BOOK CABINET
ARMARIO PARA LIB

BOOK CABINET
BIBLIOTHÈQUE

Press French key (i.e. 1), display shows:

6. To enter a new word, just type or press <CLEAR> and then type it in.
7. Remember your language of translation changes to the last language, which you selected, e.g. Your last translation is French <BIBLIOTHÈQUE> new word is at French translation until you select the others.

- c. **WORD FINDING** - *If the word(s) you entered is not in the database, the display will show the nearest word(s) instantly.*
- d. **DATABASE SEARCH** - *Type in a word, press ENTER for translation. Press the PAGE UP / DOWN < ^ v > key and you can search all keywords in the database.*
- e. **ALPHABET WITH ACCENT** - *Some languages have their own alphabet with accent. Simply press the original key and then Accent key ACNT, the display will show different alphabet and let you to select.*

e.g. In the home language of French,
Type in A, display shows:

A_

Press ACNT once, display shows:

À_

Press ACNT twice, display shows:

Á_

Press ACNT three time, display shows:

Â_

Press ACNT four time, display shows:

Æ_

Press ACNT again, display shows:

A_

e.g. In the home language of German,
Type in S, display shows:

S_

Press ACNT once, display shows:

ß_

Press ACNT again, display will return to shows:

S_

f. NOTE :

1. To get an interval, such as THANK YOU, press <SPACE > key.
2. ERROR CORRECTIONS
 - To erase all the words on the display quickly, press <ENTER> or <CLEAR>and then type a new word.
 - To erase the last input character, press BACKSPACE (←⊗).
3. The ->sign indicates the word is longer than the display, press the right key to scroll the full word and press the LEFT key to get front again.
4. There are 21 Symbols inbuilt the translator. E.g. , . - @ / \ & ; : () = _ ' " ! \$ % # * ? .

a. Press symbol key, display first symbol :

b. Press ACNT (Accent), display change the symbol
with your choice.

’ _

5. For Russian and Greek, the translator display their own alphabet, plus the latin letters. It displays the own alphabet first, then latin letters of an icon of ■ .

e.g. in English to Russian, e.g. <BOWL>, press <ENTER>, display shows,



g. PHRASE TRANSLATION

The translator contains about 2,000 useful sentences at each. It helps you to translates 16 languages instantly.

There are 16 Categories and their subjects for your search:

 




ACCOMMODATION - Business Centre, Checking in, Checking Out, Front Desk, Laundry, Looking for a Hotel, Operator, Problem, Reservation, Room Service.

BASIC - Colors, Date/Week, Figure, Months, Numbers, Position, Time, Unit.

BUSINESS CONVERSATION - General Term of Trade, Interview, Letter of Credit, Meeting, Payment Terms, Shipment Document.

COMMUNICATION - Apology, Asking Again, Basic Question, Congratulations, Conversation, Emotion, Expressing Sympathy, Invitation, Phrases, Phrases of Love, Quarrel, Saying Goodbye, Saying Hello, Thanks.

- EMERGENCY - Asking for Help, Hospital, Lost/Theft, Pharmacy, Sudden Illness/Injury, Symptoms/Diseases.
- ENTERTAINMENT - Bar, Casino, Disco, Karaoke, Night Club, Recreation, Sauna Bath.
- FOOD - Bar Snack, Beverages, Chinese Dessert, Chinese Snack, Condiments, Cooking, Daily Food, Dinner Set, Fruit, Meals, Meat, Sea Food, Taste, Vegetable, Western Dessert, Western Snack, Wine.
- GENERAL KNOWLEDGE - Animal, City, Country, Insect, Plant, Vacation Places, Weather/ Geography.
- HUMAN BEING - Chinese year/Birth of 12 Animals, Education, Family, Festival, Marriage, Music/Musical Instruments, Occupation, Race, Religious, Society, Zodiac.
- LIVING - Clothing, Cosmetic, Electrical Appliances, Furniture, Housing, Jewelry & Accessories, Office Appliance, Shoes/Hosiery/Headgears, Size/Materials/Skin Care/Sleeping Set, Souvenirs, Tele-Communication, Toiletry, Tools.
- MEALS - Chinese Food - Beijing Cuisine, Chinese Food - Cantonese Cuisine, Chinese Food - Shanghai Cuisine, Chinese Food - Szechung Cuisine, French Food, Indian food, Italian food, Japanese Food, Korean Food, Looking for a Restaurant, Mexican Food, Order, Payment, Reservation, Thai Food, Vietnamese Food, Waiter's Service, Western Food.
- SHOPPING - Bargaining, Clothes/Tailor, Looking for a Store, Paying, Purchasing,.
- SIGHTSEEING - Entering a Country, Exchanging Money, In the Plane, Leaving a Country, Photography, Sightseeing/Tours, Tourist Information.
- SPORT - Ball Games, General Sports, Golf.
- TELECOM/MAIL - Mailing, Telegram/Fax/Page, Telephone.
- TRANSPORTATION - Airplane, Bus, Car, Map, Ship, Taxi, Train, Under-Ground Railyway.

1. Press <Phrase> key, display shows:

2. Press the<DOWN> <▼> or <PAGE DOWN> <∨> key to search your required category, e.g. BUSINESS CONVERSATION

3. Press <ENTER> to confirm the category of BUSINESS CONVERSATION, display shows first sentence: <GENERAL TERM OF TRADE>

4. Use Up or Down keys to go to your category, e.g. <SHIPMENT DOCUMENTS>.

5. Press <ENTER>, you can see on display the first phrase of <AIRWAY BILL> and Spanish translation.

6. If this is not the sentence you required, press <PAGE UP> or <PAGE DOWN> key until you find the right one, then translate it.
7. To search for other categories, simply press <ESC> and use the small Up and Down key to search.
8. For quick search, type in a the initial letter, it goes to quick search the desired subject or sentences which is with the same initial letter.

9. The -> sign indicates the sentences is longer than the display, press the right key to scroll the full sentence and press the left key to get front again.

F. USING THE DATABANK

NOTE : If your home language is Russian or Greek, you will input their letter in databank. But if you want to input english letter, e.g. E-mail, Home Page, you can press <ACNT> change to english input mode, the sign will change to 7, and press <ACNT> again to change back to Russian or Greek input mode.

a. INPUT YOUR DATABANK

- 1) Press <TEL>, display shows:
- 2) Type in the name, e.g.
BILL GOTE, display shows:
- 3) Press <ENTER>, display shows:
- 4) Type in the number tel,
e.g. <1 01 234 56789>

ENTER NAME

BILL GOTE

ENTER TEL

1 01 234 56789

- 4) Press <ENTER>, display shows:
- 5) Type in the address of e-mail, e.g. <BILL@E-MAIL.COM>
- 6) Press <ENTER>, display shows:
- 7) Type in the address of homepage, e.g. <WWW.BILLGOTE.COM>
- 8) Press <ENTER>, display shows:
- 9) Type in the number of fax, e.g. <1 01 234 56790>
- 10) Press <ENTER>, display shows:
- 11) Type in the address, e.g.
- 12) Press <ENTER> to store the information.
- 13) To erase the whole input, press <AC>.

ENTER E-MAIL

BILL@E-MAIL.COM

HOME PAGE

WWW.BILLGOTE.COM

ENTER FAX

1 01 234 56790

ENTER ADDRESS

NOW YORK CITY

b. RETRIEVE YOUR DATA

- 1) Press <TEL>, to enter to the DATABANK mode.
- 2) Press the <DOWN> key to scroll data according to the alphabetical order of the names stored.
- 3) For quick search, then type in the first letter of the name or full name you want to retrieve now, and then press <ENTER> to retrieve its phone number or address or memo.

ENTER NAME

BILL GOTE
01 234 56789

c. EDIT YOUR DATA

- 1) Press <TEL> to enter into the DATABANK mode.
- 2) Press <DOWN> key to search the name, display shows:
- 3) Press <EDIT>, the display shows a cursor on the first letter flashing:
- 4) Move the cursor by using the <RIGHT> <LEFT> <UP> or <DOWN> key, type in a new letter, e.g. move the cursor to <O> and type in <A>, press <CLEAR> to delete the <O>. Then press <ENTER> to store the edited information.

ENTER NAME

BILL GOTE
01 234 56789

BILL GOTE ▶
01 234 56789 ▶

BILL GATE
01 234 56789

d. DELETE THE DATA

- 1) Press <TEL> to enter into the DATABANK mode.
- 2) For delete one data, press <DOWN> key to search the require name, e.g. display shows:
- 3) Press <CLEAR>, display shows:
- 4) Answer by pressing either <Y> for YES or<N> for NO, after which the Translator will return to the databank mode.
- 5) To delete all the data inside the databank, when the display show:
- 6) Press <CLEAR>, display shows:
- 7) Press <Y> for YES to delete all data inside, or press <N> for NO, after which the Translator will return to the databank mode.

ENTER NAME

BILL GATE
01 234 56789

DELETE
(Y/N)?

ENTER NAME

DELETE ALL
(Y/N)?

G. USING THE CALCULATOR

You can use the Translator to do standard arithmetic calculations, memory calculation and percent calculations. It calculates up to 12 digits.

1. Press <CAL> to go into the calculator mode, display shows:
2. Standard calculation, +, -, X, ÷.
3. Memory calculation:
(M+) to total a calculation and add the total to memory.
(M-) to total a calculation and subtract the total from the value in memory.
(MR) to recall or display the value in memory.
(MC) to clear the memory.
4. <CLEAR>:
(CE) To clear display.
(AC) To clear all calculation memory.



H. USING THE CURRENCY CONVERSION

a) SETTING THE CURRENCY AND EXCHANGE RATES

The translator can convert 8 user-programmed currencies and your own denomination.

1. Press <CONV> key to go to conversion mode, and then <1> to select CURRENCY conversion, display shows:
2. Press <EDIT>, the currency name is flashing,
3. Press right arrow key <▶> to move the flashing to the exchange rate. Change the exchange rate by type in a new rate, e.g. US Dollar one approximately equals to 1.02 EURO,
4. Press <ENTER> to confirm the setting.

b) CONVERTING CURRENCY

1. Type in the amount, e.g. USD1,000:
2. Press <=> or <ENTER>, display shows: 1020.

▶ 1. CURRENCY
2. METRIC

USD -->EUR
1.

USD -->EUR
1.

USD -->EUR
1.02

USD -->EUR
1.02.

USD -->EUR
1000.

USD -->EUR
1020.

3. Press <RIGHT> key to make 2 currencies inverse, e.g. to find one EURO to what amount of US Dollar. Press <RIGHT> key, the arrow will reverse automatically:

USD <-- EUR	I
	0.

4. Type in 1000, and then press <=> or <ENTER>, display shows: (i.e. EURO 1 = USD 980.3921568)

USD <-- EUR	I
	1000.

5. To clear display for next calculation, press <CE>.

USD <-- EUR	I
	980.392156863

6. The other type of currency conversion are with same format as above.

- c) ***There are 8 currency name programmed in the translator, use PAGE UP/ PAGE DOWN (^ v) key to select the other of currency.***

USD -> EUR = USD -> EURO

EUR -> USD = EURO -> USD

USD -> GBP = USD -> Great British Pound

GBP -> USD = Great British Pound -> USD

USD -> RMB = USD -> Chinese Ren Min Bi

RMB -> USD = Chinese Ren Min Bi -> USD

USD -> JPY = USD -> Japanese Yen

JPY -> USD = Japanese Yen -> USD

2. *If you want to change the Currency name :*

- a. Press <CONV> key to go to conversion mode, and then <1> to select CURRENCY conversion, display shows:
- b. Press <EDIT>, the exchange rate is flashing :
- c. Press <RIGHT> key (▶) to move cursor to EUR, type in CAD.
- d. Press <ENTER> to confirm the setting.
Now you currency name is USD -> Canadian dollar.

USD -->EUR	1.
------------	----

USD -->EUR	1.
------------	----

USD -->CAD	1.
------------	----

USD -->CAD	1.
------------	----

I. USING THE METRIC CONVERSION

The Translator can convert one type of measurement to another. The following 8 related pairs are built-in the unit and they can be inverse : °C(Celsius) to °F (Fahreheit) ,M (Metre) to F (Feet), CM (Centimetre) to IN (Inch), L(Litre) to GL(US Gallon), L(Litre) to BG (British Gallon), KG (Kilogram) to LB (Pound),G (Gram) to OZ (Ounce) and A (Are) to AC (Acre).

1. Press <CONV> key to go to conversion mode, and then <2> to select CURRENCY conversion, display shows °C- °F and the formula for Celsius to Fahrenheit.

1. CURRENCY ▶ 2. METRIC

°C -> °F F=1.8 *C+32

2. Enter the amount, e.g. 25°C, press 25 then <ENTER>, display shows from Celsius to Fahrenheit.
i.e. 25°C = 77°F.
3. Press <RIGHT> key to convert from Fahrenheit to Celsius, display shows:
4. Enter the amount, e.g. 100 °F, press 100 then <ENTER>, display shows from Fahrenheit to Celsius.
i.e. 100°F=37.77777777°C.
5. The other type of measurement conversion is with same format as above.
6. Press <PAGE UP> or <PAGE DOWN> keys to search other conversions.
E.g. Press <PAGE DOWN> key to have next conversion : M->FT.

$^{\circ}\text{C} \rightarrow ^{\circ}\text{F}$ 25.
--

$^{\circ}\text{C} \rightarrow ^{\circ}\text{F}$ 7 7.

$^{\circ}\text{C} \leftarrow ^{\circ}\text{F}$ I 0 .

$^{\circ}\text{C} \leftarrow ^{\circ}\text{F}$ I 100.
--

$^{\circ}\text{C} \leftarrow ^{\circ}\text{F}$ I 37.777777778
--

M -> FT 3.28084

K. USING THE SIZE CONVERSION

You can use the Translator to convert the garment size. The following 4 subject are built-in the unit:

Women Clothes

Men Shirts

Women Shoes

Men Shoes

1. Press <CONV> key to go to conversion mode, and then press <DOWN> key or <3> to select SIZE conversion, display shows:
2. Use <UP> or <DOWN> keys to select the desired subject. e.g. <WOMAN SHOES>.
3. Press <ENTER>, display shows:
4. Use <UP/DOWN/LEFT/RIGHT> arrow key to see other conversion.
5. Press <ESC> to return to select conversion screen.

2. METRIC ▶ 3. SIZE

▶ Women Clothes Men Shirts

▶ Women Shoes Men Shoes

America	5 ¹ / ₂	6
Britain	4 ¹ / ₂	5

Italy	37	37 ¹ / ₂
Japan	23	23 ¹ / ₂

L. PERSONAL PASSWORD

You can protect your DATABANK information by inputting your personal password. Before you input the password, make sure you can remember the password number otherwise your DATABANK will be locked until you reset your Translator.

- 1) At the mode of the Local Time, e.g. display shows:
- 2) Press <LOCK>, display shows:
NEW PASSWORD
- 3) Enter your password (not more than 6 letters), e.g. A1B2C3, display shows: *****
- 4) Press <ENTER>, display shows: CONFIRM
- 5) Press your password <A1B2C3> again, press ENTER to confirm this password. Display shows:

NEW YORK
L AM 07:40:07

NEW PASSWORD

—

NEW PASSWORD

CONFIRM

—

LOCKED

6) After you confirm to set up this password, you have to input the password when you go into the DATABANK mode. e.g. Press <TEL>, display shows: ENTER PASSWORD

ENTER P ASSWORD

—

7) When you type in a correct password, it will release you to the DATABANK mode. If you type in an incorrect password, display will flash INCORRECT PASSWORD and ask you ENTER PASSWORD again.

INCORRECT
PASSWORD

ENTER P ASSWORD

—

8) Release your password, press <LOCK> when it is in the LOCAL TIME mode, display shows: ENTER PASSWORD.

ENTER P ASSWORD

—

9) When you enter a correct password, display flashes UNLOCKED, the password is released and display returns to LOCAL TIME mode, display shows:

UNLOCKED

10) If you enter an incorrect password, display returns to LOCAL TIME mode and the password does not be released.

NEW YORK
L AM 07:51:05


11) If you forget the password, you have to reset the Translator. In this case, all the information in your DATABANK will be lost.

L. KEY TONE

In local time mode, press <S> <🎵> to turn on or off the tones.

M. RESET :

If the translator is with abnormal display from an improper use, we recommend to use a thin and pointed object to press the hole to reset the translator.

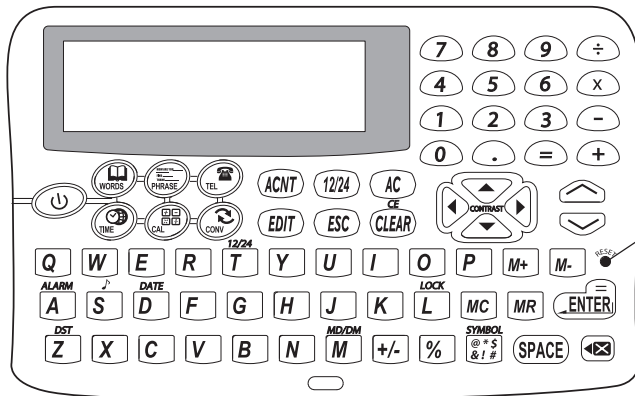

RESET KEY-

Switch on the translator or hold the ON/OFF key while pressing reset.

FOLLOW THE CORRECT OPERATING PROCEDURES, WE SINCERELY HOPE THAT YOU WOULD ENJOY THE INTEREST OF THE TRANSLATOR.

LingoTM

Distributed by Lingo Corporation, New York, Hong Kong.

Major components manufactured in Japan. Assembled in China.

Lingo TravelMate is a registered trademark of Lingo Corporation.