



**6 language translator**  
**English, French, German, Spanish, Italian, Dutch**

**User Manual**

- Introduction:
  - Main Functions: Simple Word or Phrase Translation.
  - Additional Function: Search for words or phrases in alphabetical order.
- Capacity:
  - The maximum number of characters that you can input is 30.
  - Six languages (English, French, German, Italian, Spanish, Dutch). 5000 words per language. ~120 sentences per language.



- Instructions:
  - LCD display
    - The first line is word/phrase line.
    - The second line is prompt line for the language and translation status, where WORD for word translation and PHA for sentence translation.
    - ENG: English GER: German
    - FRE: French SPA: Spanish
    - ITA: Italian DUT: Dutch
  - Key Functions:
    - In time display mode, press MODE button once to enter translation mode.
    - Language selection button (i.e. ENG): select a language.
    - Press ← button to erase a letter.
    - Press ↓ button to select a letter.
    - Press CLR to erase a word.
  - Translations:
    - Word Translation
      - Press "MODE" key once to select translation mode.
      - Press "WORD/PHA" key to change from word to phrase translation.
      - English is default. Press a different language key for translation in that language.
      - Example: translate English to German.
      - (1) Input the word "BEEF". Then press enter key.
      - (2) Press "GER" key to display the word in German.
      - (3) Press "FRE" key to display the word in French.
      - (4) Press ↑, ↓ button in order to search for more words.
      - (5) Press any letter to start a new translation.
      - (6) Press ESC button any time to return to time display mode.
      - (7) Press MODE button once to cancel word translation and enter RECALL mode.
      - (8) How to input special characters.
        - E.g. German is home language
        - Input "s"
        - Press ↓ button to display "S"
        - Pressing ↓ button again will display "B"
        - The index of special letters in different language.

English: nothing	
German:	
→a→Ä→ä→	→o→ö→ü→
<-----	<-----
→s→S→ß→	→u→U→Ü→
<-----	<-----
→e→E→É→é→	<-----
French:	
→c→C→Ç→ç→	→c→C→Ç→ç→
<-----	<-----
→a→A→à→â→	→i→I→î→ï→
<-----	<-----
→o→O→ô→ò→œ→	u→U→ù→û→
Spanish:	
→a→A→á→	→o→O→ó→
<-----	<-----
→e→E→é→	→i→I→í→
<-----	<-----
u→U→ú→	n→N→ñ→
<-----	<-----
Italian:	
→e→E→é→È→è→	→e→E→é→È→è→
<-----	<-----
→i→I→ì→	→o→O→ó→ò→
<-----	<-----
u→U→ù→	<-----
Dutch:	
→o→O→ó→ö→	→o→O→ó→ö→
<-----	<-----
u→U→û→	→c→C→ç→
<-----	<-----
→i→I→ï→	<-----

- Phrase Translation:
  - In translation mode, press "WORD/PHA" key to switch from word to phrase translations and the first category will be shown.
  - Press DOWN (↓) key to display a phrase.
  - Pressing another language key to translate this sentence into that language. If the sentence is too long, the icon "→" will be shown on LCD and pressing "→" key, the sentence will be scrolled from right to left.
  - Press ↓ button to display the next phrase.
  - Keep scrolling in order to access other phrases (money, phrase, hotel, ...etc.)
  - Press ESC button to cancel phrase translation and return to the time display.
  - Press MODE button to leave phrase translation to enter RECALL mode.
  - Press WORD/PHA button to leave phrase translation and enter WORD translation.

**BATTERY REPLACEMENT**

This unit operates on CR2025 batteries (DC 3V). Be sure to read the following precautions before replacing battery.

- Turn off the unit before replacing battery.
- Unscrew the battery cover screw.
- Replace the old battery with 1 new CR2025 battery with positive polarity face upward.
- Important:** Be sure that the battery is installed correctly. Wrong polarity may damage the unit.
- For better performance and longer operating time, we recommend the use of good quality CR2025 batteries.

**RESET THE UNIT**

- Reset the unit if it fails to respond.
- Insert the pointed end of a paper clip into the small round hole located directly below the word **RESET** on the rear of the unit. Push gently.
- This product may need to be reset manually in a high electro-static environment.

**Word Storage and Inquiry**

- Word Storage
  - Press MODE key to select word translation mode.

- Press Language (i.e. ENG, FRE, GER, ...) key to select language. Press ENTER. If the word is correct, press SAVE key to save the word. The screen will display "saved" and available memory will be displayed. When one word is being saved and you press the SAVE key again, the screen will display "LINKING" and the saved word will be treated as only one record.
  - If you don't separate the saved words (i.e. you didn't press the SAVE key twice), saved words will be saved in one sentence. To separate it with the previous saved words, customer can press the SAVE key twice, "LINKING" will be displayed on LCD and the saved words will be separated with the previous saved words/sentence.
  - 30 (max.) words can be saved.
- Word Recall
    - Press MODE key to enter the RECALL mode.
    - The quantity of saved words will be displayed on screen.
    - Press language (i.e. ENG, FRE, GER, ...) key to translate.
    - Press UP (↑)/DOWN (↓) to select records that are not separately saved.
    - If there are some records that are not separated, "→" or "←" icon will be shown on the LCD. If it is former, press "→" key to scroll right character one by one. User can press "→" or "←" to scroll the word.
    - Press CLR button to clear this separated record.
    - Press ESC button to escape RECALL mode and return to time display mode.
    - Press MODE button to leave RECALL mode and enter calculator mode.

**Calculator Manual : To enter calculator mode, press MODE 3 times.**

- General Description
  - Calculator Function
  - Exchange rate calculations
- Calculator Functions
  - Introduction
    - Function:
 

Arithmetic Operations	Memory Operations
Percent Calculations	Calculation: 10-digit
  - Calculations:
    - For mathematic operations use (+ - \* /): for calculations
    - Use the C/CE key to clear input number(s)
    - Memory key (M+, M-, and MRC): for memory operations
  - Calculator Status
    - When entering calculator mode, screen will display '0'.
    - If user finds there is mistake before pressing mathematics operation key, user can press C/CE key to clear the wrong number, pressing C/CE twice will clear all numbers.
    - Press the MRC key to display the content of memory.
    - Press MRC button once more to clear memory and/or the "M" icon.
    - Some mark will be shown in LCD, i.e.
      - M: means memory is not clear.
      - Error: means error or overflow during calculation. The calculator will locked. Press C/CE button to unlock calculator.
    - Press "ESC" and "MODE" button to cancel calculation and return to time mode.
- Calculation Example
  - Arithmetic
 

Input	
56 * 3 - 89 + 5.2 + 63=	
	78.192307
  - Overflow or Error
 

123456789 * 999999999=	
Operation by pressing:	
123456789 * 999999999=	
	Error

Press CE:

0

Press ESC & MODE:

PM 4\_38 SUN

c) Percentage Calculation

Basic % calculation formula

Input	formula
550/880%	550/880*100=62.5
480+25%	480(1+25%)=600
100-80%	100(1-80%)=20

Percentage calculation example:

①. 1500\*12%

180.

②. 660-880%

75.

③. 480+25%

600.

④. 100-80%

20.

d) Memory Calculation

If there is data in memory, the "M" icon will show on the LCD. The memory will not be erased even if you escape the calculator mode.

Memory button:

M+: The current data will be added into the memory.

M- : The current data will be subtracted from the memory.

MRC: Press "MRC" once to display memory content, press "MRC" one more time to erase the memory and clear "M" mark, but the current numbers will not be cleared from the LCD.

For example:

4\*5 M+

20.  
M

28+2 M+

30.  
M

7-2 M-

5.  
M

80.

125

3. Exchange rate conversion

3.1 Display

In calculator mode, press rate button to display exchange rate. Default exchange rate is HOME/EURO=1.

RATE 1.

3.2 Exchange rate setting

When the exchange rate is displayed, press RATE button and RATE will flash on the screen. A number can be input and then press ENTER to complete the rate setting. Note: The digit of exchange rate setting is not more than 5.

3.3 Exchange rate calculation

a) In calculation mode, you can input the value.

b) Press "HOME" or "EURO" for exchange rate, and you can change the direction of exchange calculation. If exchange direction is changed, calculation result will be different.

c) Press ESC and MODE button to cancel the exchange calculation, and then return to TIME display.

For example:

FRANC \$2.00-EURO \$1.00

Operation:

(1) Change exchange rate to 2.

(2) Input 100.

(3) Press EURO, 50 will be show on the screen, i.e. FRANC \$100-EURO \$50.

(4) If you enter 100, then press HOME, 200 will be show on the screen, i.e. EURO \$100=FRANC \$200.

Time/Calendar Manual

1. General Description

Clock Function:

Local Date & Time

Time display setting

(Year range from 1901-2154, total 254 years)

2. Time/Calendar Display

Press "ON/OFF" key to turn on/off LCD, local time displayed on LCD when power is ON. By default, it is in 24-hour format.

2.1 Local time display

Content:

a. Local Time HH:MM:SS (SS flashing)

b. Current weekday:

The format of TIME display in Fig.1:

22\_25 SUN

Fig 1

Fig.1 showing: Sunday, 10:25p.m.

2.2 Date display

Press DATE key, display YY: MM: DD

Press ESC key return to time display

10 JUN., 1999

Fig 2

Fig 2 showing: 10 June, 1999.

3. Time/Calendar Setting

In Time display mode, press button "S" then set the time. Then press DATE button.

3.1 Press ↑ ↓ button to edit Time and Date.

3.2 Press ← → button to choose target section, the selected section will flash.

3.3 The default setting is valid when pressing ENTER key. Then, Time or Date will display on the screen.

3.4 Press "ESC" key to quit setting and exit Time/Date setting status, return to Time display mode.

System setting

1. General Description

System setting includes

1.1 Key tone setting

1.2 User name setting

1.3 Time display method setting

2. Operation

2.1 Key tone

In Time status, press BELL/B button to turn on/off the key tone.

Turn on key tone: Press BELL key, a BELL icon will be shown in screen.

Turn off key tone: Press BELL key again to cancel key tone function.

2.2 Setting user name

a) Setting or modification

(1) In time display mode, press "S" button to start time setting.

(2) Then press N/name button to start User Name setting, the saved username (if any) will be shown, characters or numbers are valid.

(3) Press ENTER key to confirm and finish setting.

(4) Press ESC button to quit setting.

(5) Press ← button to delete characters or numbers one by one.

(6) Press CLR to clear screen.

(NOTE: The maximum number of characters for username should not be more than 11)

b) Cancel

In Username setting, press CLR button then press ENTER button to cancel the former setting.

c) Power Turn-On Display

If User Name has been set, username will be shown first then enter time display after 1 second.

2.3 Time display method setting

In time display status, press V button (12/24H) to switch between 12/24-hours.

Lingo Corporation  
1225 East 14th. Street  
Brooklyn, NY 11230  
www.lingotranslators.com